


Advanced Microfiber System: Charging System Procedure

Provided by:




Mop Preparation

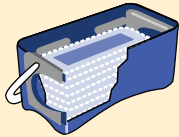

Place Mega-Loop mops Velcro-side up into the charging bucket. Mops can be loaded directly from washer (wet).


Mix 1.5 gallons (or 1 quart/5 mops) of cleaning solution, preferably through a dispensing system.

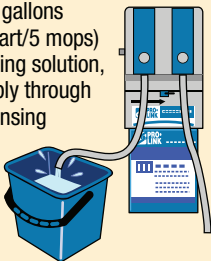



Pour cleaning solution from the dosing bucket into the loaded charging system.



Snap on charging system cover, ensuring all eight locks are engaged (listen for click to properly secure lock).

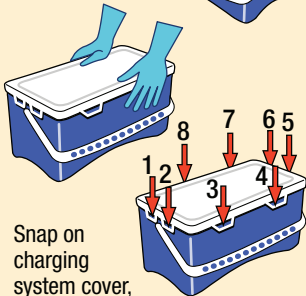


Turn bucket upside-down for 30 minutes to properly "charge" each Mega-Loop mop.

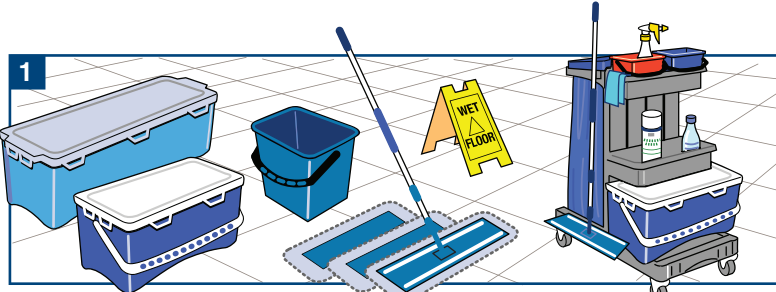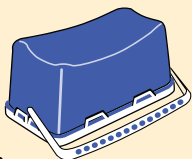


1 Gather and prepare your cart with all required cleaning chemicals and tools, including the prepared charging system.




2 Wear personal protective equipment.

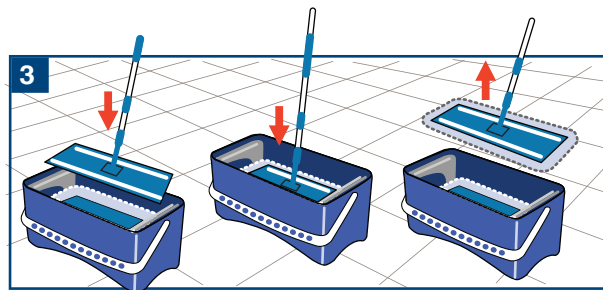


3 Using the Velcro mop holder with telescopic handle, pick up one charged Mega-Loop mop from the charging bucket.

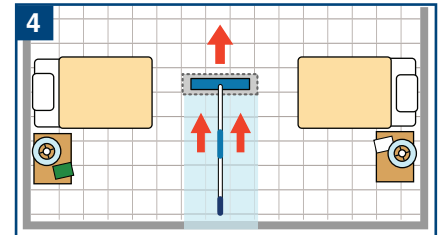


4 Place mop on the floor at the entrance of the room or section. Push mop straight to the back of the room or section distributing a path of cleaning solution down the center. *Note: work in sections of 300 square feet.*

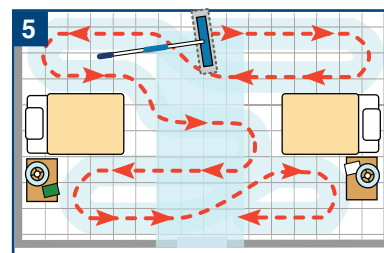

5 Using a figure 8 motion, mop from the back of the room or section towards the front, crossing the center solution path to pick up and distribute solution evenly.

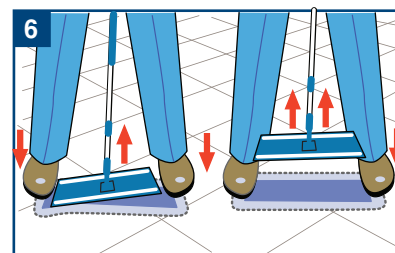

6 Remove soiled Mega-Loop mop by placing both feet on mop ends extending from the holder. Arrows on the holder will point away from you. Pull up on the mop handle to remove the mop from the holder.

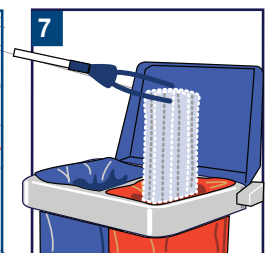

7 Using the mop grabber, pick up the soiled mop and place in the laundry bag. Repeat steps 3 through 7 for each 300 square foot section.